



Ⓜ All points and derails that are numbered are fitted with remotely controlled point motors

NO EMC PERMITTED INTO PLATFORM 5

2000 CLASS NOT PERMITTED TO BELAIR MAIN

ADELAIDE

- SM BM S2 S4
111, 131
- SM BM S4
141, 143
- SM BM PM NM S4 S5 NY
145
- PM NM NY
151, 161
171, 181

THEATRE ROUTE INDICATORS
LETTER DEFINITIONS
 SM: Seaford Main
 BM: Belair Main
 S2: 102 Stabling Road
 S4: 104 Stabling Road
 S5: 142 Stabling Road
 PM: Port Main
 NM: North Main
 NY: North Yard

NUMBER DEFINITIONS
 Numbers indicate Platform Number

- | | | |
|----------|----------|---|
| 1 | 2 | 5 |
| 102 | 142 | |
| 1 | 2 | 5 |
| 3 | 4 | 6 |
| 5 | | 7 |
| | | 8 |
| | | 9 |
| 104, 112 | 152, 154 | |
| 114, 132 | 172, 174 | |
| 134 | 182 | |

Signal Locations

Home Support

© 2009 G F Vincent

= Axle Counter detection for signalling

BROAD GAUGE TRACK
ADELAIDE - ADELAIDE WYE

A2001