



FROM THIS POINT ON, SIGNALS ARE ONLY SHOWN WHEN THEY ARE ON MAIN LINES, OR ARE PROTECTING ACCESS TO, OR ACROSS THEM.

STANDARD GAUGE TRACK
PARRAMATTA - GRANVILLE