



TONNAGE SIGNAL
 TRAINS OVER THE PRESCRIBED
 LOAD TO WAIT UNTIL
 SIGNAL IS AT FULL CLEAR

ON THIS SHEET, SIGNALS ARE ONLY SHOWN
 WHEN THEY ARE ON MAIN LINES, OR
 ARE PROTECTING ACCESS TO, OR ACROSS THEM.

ST426, AN25, 28, 32, 37
 Normally red aspect.
 X = Interleaved LEDs can show Green or Yellow
 / = Interleaved LEDs can show Green

STANDARD GAUGE TRACK
CLYDE - LIDCOMBE