

NSW EAST-WEST (Goobang Junction - Broken Hill) -- SIGNAL LOCATIONS

Goobang Junction - Broken Hill					DOWN MOVEMENT	Goobang Junction - Broken Hill					UP MOVEMENT	RETURN TO DIN MENU	
Signal Number	Signal Type	Km	GPS	Track		Signal Number	Signal Type	Km	GPS	Track			
DO NOT USE THIS DATA FOR OPERATIONAL PURPOSES WITHOUT CHECKING						DO NOT USE THIS DATA FOR OPERATIONAL PURPOSES WITHOUT CHECKING							
SIGNAL TYPES DEFINED GENERICALLY ONLY						SIGNAL TYPES DEFINED GENERICALLY ONLY							
CLICK ANYWHERE IN THE TABLE TO RETURN TO THE RELEVANT DRAWING						CLICK ANYWHERE IN THE TABLE TO RETURN TO THE RELEVANT DRAWING							
					DOWN						UP		
GOOBANG JCN		Incorporating			SCT PARKES								
GJ127	Home YL/EYL	446.950	-33.144729,148.156561	Main		GJ124	Starter	447.144	-33.144626,148.156257	West Fork			
GJ125	Home	447.120	-33.144777,148.156524	West Fork		GJ126	Starter	447.144	-33.144574,148.156284	Main			
GJ131	Home Junction	447.352	-33.143579,148.154463	West Fork		GJ134	Home Junction	447.527	-33.142325,148.153292	Main			
GJ133	Home Junction	447.352	-33.143544,148.154511	Main		GJ136	Home Junction	447.585	-33.141865,148.152765	Loop			
GJ143	Starter + TO Start	448.690	-33.138755,148.141581	Branch		GJ138	Home Junction	447.585	-33.141826,148.152789	Branch			
GJ145	Starter	449.468	-33.135444,148.134355	Main		GJ144	Home	449.150	-33.136341,148.137538	Branch			
GJ147	Starter	449.468	-33.135342,148.134401	Loop		GJ148	Home Junction	449.582	-33.134979,148.133022	Single Line			
GJ149	Starter + TO Start	451.590	-33.144263,148.117491	Single Line		GJ150	Home YL	451.792	~ -33.145208,148.115364	Single Line			
A	MLI Junction	452.932	data n/a	Main		AM	Point Indicator	453.058	data n/a	Main			
DM	Point Indicator	454.300	data n/a	Main		ANE	Point Indicator	453.287	data n/a	East Leg Triangle			
DNW	MLI	454.300	data n/a	West Leg Triangle		D	MLI Junction	454.447	data n/a	Main			
ENE	Point Indicator	453.835	data n/a	East Leg Triangle		E	MLI Junction + Shunt	453.127	data n/a	NW Link			
ENW	Point Indicator	453.292	data n/a	West Leg Triangle									
GUNNINGBLAND													
A	MLI	470.581	~ -33.135909,147.918891	Single Line		X	MLI	469.305	~ -33.136596,147.920356	Single Line			
						B	MLI	471.094	~ -33.132956,147.913780	Single Line			
BOGAN GATE		BOGAN GATE AWB											
A	MLI + Repeater	482.321	-33.108299,147.810787	Single Line		EM	MLI	483.401	-33.108751,147.801320	Single Line			
X	MLI	483.315	-33.108751,147.801320	Single Line		EB	MLI	483.401	-33.108675,147.800326	Branch			
F	MLI	487.200	-33.113039,147.758649	Single Line		Y	MLI + Repeater	487.300	-33.113112,147.757574	Single Line			
YARRABANDAI													
A	MLI Junction	504.391	-33.130024,147.577981	Single Line		Y	MLI	504.535	-33.129791,147.575852	Main			
BL	Point Indicator	506.455	~ -33.127147,147.555404	Loop		X	MLI	504.535	-33.129609,147.575908	Loop			
BM	Point Indicator	506.455	~ -33.127315,147.555379	Main		B	MLI Jcn + Repeater	506.555	~ -33.128121,147.564054	Single Line			
CONDOBOLIN		Incorporating			CONDOBOLIN AWB								
A	MLI	545.304	-33.081170,147.162609	Single Line		G	MLI	546.662	-33.08253,147.149422	Single Line			
H	MLI	549.100	-33.072326,147.129838	Single Line		X	MLI	548.266	-33.072366,147.138766	Single Line			
						J	MLI	549.603	-33.072417,147.124452	Single Line			
KIACATOO													
A	MLI Junction	575.756	data n/a	Single Line		AL	Point Indicator	575.857	data n/a	Loop			
BL	Point Indicator	577.707	data n/a	Loop		AM	Point Indicator	575.857	data n/a	Main			
BM	Point Indicator	577.707	data n/a	Main		B	MLI Junction	577.828	data n/a	Single Line			
EUABALONG WEST													
A	MLI	618.353	-33.053496,146.398777	Single Line		F	MLI	619.499	-33.055366,146.386402	Single Line			
X	MLI	619.405	-33.055264,146.387517	Main		F RPTR	MLI Repeater	620.565	-33.056468,146.377266	Single Line			

NSW EAST-WEST (Goobang Junction - Broken Hill) -- SIGNAL LOCATIONS

Goobang Junction - Broken Hill					DOWN MOVEMENT	Goobang Junction - Broken Hill					UP MOVEMENT	RETURN TO DIN MENU
Signal Number	Signal Type	Km	GPS	Track	Signal Number	Signal Type	Km	GPS	Track			
MATAKANA						MATAKANA						
A	MLI Jcn + Repeater	663.676	-32.993342,145.924303	Single Line		AL	Point Indicator	663.760	-32.993032,145.922855	Loop		
X	MLI	665.616	~ -32.990615,145.904299	Loop		AM	Point Indicator	663.760	-32.993086,145.922839	Main		
W	MLI	665.616	~ -32.990696,145.904272	Main		B	MLI Junction	665.883	-32.990111,-32.990111	Single Line		
TRIDA						TRIDA						
A	MLI Junction	749.311	-33.020814,145.018472	Single Line		X	MLI	749.523	-33.020377,145.016165	Main		
BL	Point Indicator	751.397	data n/a	Loop		Y	MLI	749.523	-33.020485,145.016138	Loop		
BM	Point Indicator	751.397	data n/a	Main		B	MLI Jcn + Repeater	751.579	-33.017163,144.99464	Single Line		
IVANHOE						IVANHOE						
A	MLI Jcn + Repeater	816.073	-32.914664,144.315379	Single Line		X	MLI	816.193	-32.914554,144.314067	Main		
W	MLI Jcn + Repeater	818.214	-32.912633,144.292626	Main		Y	MLI	816.193	-32.914457,144.314086	Loop		
Z	MLI Jcn + Repeater	818.214	-32.912511,144.292655	Loop		B	MLI Jcn + Repeater	818.318	-32.912477,144.291534	Single Line		
V	MLI	818.924	-32.911969,144.285129	Single Line								
TRONOX						TRONOX						
T	MLI	822.730	-32.908316, 144.244683	Single Line		C	MLI Junction	802.82	-32.908233,144.244683	Single Line		
CS	MLI	822.730	-32.908433,144244633	Siding								
DARNICK						DARNICK						
A	MLI + Repeater	879.675	-32.852284,143.639769	Single Line		X	MLI	880.805	-32.851067,143.62778	Main		
Y	MLI	880.665	-32.851288,143.629411	Main		D	MLI + Repeater	881.784	-32.850085,143.617507	Single Line		
KALEENTHA						KALEENTHA						
X	MLI Junction	942.795	-32.62122,143.031	Single Line		AL	Point Indicator	943.011	-32.620484,143.028945	Loop		
BL	Point Indicator	944.840	-32.614293,143.01091	Loop		AM	Point Indicator	943.011	-32.620445,143.028972	Main		
BM	Point Indicator	944.840	-32.614255,143.010921	Main		Y	MLI Junction	945.040	-32.613514,143.008914	Single Line		
MENINDEE						MENINDEE						
A	MLI + Repeater	1,006.015	-32.389259,142.430775	Single Line		F	MLI	1007.503	-32.387791,142.417436	Single Line		
X	MLI	1,006.895	-32.389374,142.421349	Main								
KINALUNG						KINALUNG						
X	MLI Junction	1064.564	-32.065233,141.971105	Single Line		AL	Point Indicator	1064.660	-32.064758,141.970246	Loop		
BL	Point Indicator	1066.509	-32.05595,141.953571	Loop		AM	Point Indicator	1064.660	-32.064724,141.970273	Main		
BM	Point Indicator	1066.509	-32.055902,141.953603	Main		Y	MLI Junction	1066.608	-32.055395,141.952761	Single Line		

Continued on Page 3

NSW EAST-WEST (Goobang Junction - Broken Hill) -- SIGNAL LOCATIONS

Goobang Junction - Broken Hill					DOWN MOVEMENT	Goobang Junction - Broken Hill					UP MOVEMENT	RETURN TO DIN MENU
Signal Number	Signal Type	Km	GPS	Track	Signal Number	Signal Type	Km	GPS	Track			
BROKEN HILL						BROKEN HILL						
BH4 DIST	Distant	1121.460	-31.966835,141.487243	Single Line		BH47	Starter + TO Start	1124.222	-31.957347,141.470656	Main		
BH4	Home YL	1123.069	-31.959116,141.481165	Single Line		BH49	Starter + TO Start	1124.222	-31.957385,141.470687	North Siding		
BH12	Shunt	1124.150	-31.95647,141.472359	Mine Siding		BH41	Shunt	1124.293	-31.958068,141.469376	North Siding		
BH8	Home	1124.073	-31.956398,141.472595	Main		BH43	Shunt	1124.133	-31.95785,141.469992	Sth Marshalling Yd		
BH14	Shunt	1124.200	-31.956848,141.471816	Shunt Neck		BH37	Starter	1124.454	-31.958856,141.468561	Goods line		
BH16	Shunt	1124.170	-31.956786,141.471829	Main		BH35	Starter	1124.454	-31.958819,141.468522	Goods Loop		
BH20	Shunt	1124.240	-31.957228,141.471082	North Siding		BH33	Shunt	1124.548	-31.958762,141.468515	South Siding		
BH24	Shunt	1124.400	-31.958049,141.469625	Goods Line		BH29	Shunt	1124.575	-31.958747,141.468062	North Siding		
BH26	Shunt	1124.400	-31.957928,141.469626	Main		BH27	Starter	1124.575	-31.958719,141.468006	Main		
BH28	Shunt	1124.485	-31.958366,141.468884	North Siding		BH23	Shunt	1125.07	-31.961285,141.463801	Main		
BH32	Shunt	1124.970	-31.9609,141.46453	North Siding		BH19	Shunt	1125.186	-31.962122,141.463002	North Siding		
BH34	Starter	1124.993	-31.960916,141.464418	Main		BH17	Home	1125.186	-31.962118,141.462935	Main		
BH44	Shunt	1125.399	-31.96503,141.461064	South Siding		BH13	Shunt	1125.714	-31.966232,141.459695	Goods Line		
BH42	Starter	1125.529	-31.965057,141.4611	Goods Loop		BH9	Home	1126.178	-31.968532,141.456927	Main		
BH40	Starter	1125.529	-31.965095,141.461138	Goods Line		BH7	Home	1126.398	-31.970537,141.454518	Main		
BH46	Shunt	1125.617	-31.965575,141.460446	Loco		BH58A	Home	1126.398	-31.970581,141.454542	Mine Branch		
BH50	Home	1125.903	-31.967445,141.458311	Goods Line				<u>km Change</u>				
BH52	Home	1125.903	-31.967409,141.458272	Main		BH5	Home YL	391.440	-31.976571,141.448843	Single Line		
BH54	Shunt	1126.301	-31.970002,141.455232	Main								
BH58	Shunt	1126.309	-31.97004,141.455269	Sth Through Road								
		<u>km Change</u>										
					UP							
SIGNALLING IN BROKEN HILL YARD CONTINUES UNDER S.A. STANDARDS												
BH56	Home	391.990	-31.973371,141.451356	Single Line								
CONTINUED ON ...	SA EAST-WEST (Kandandah - Crystal Brook) @				SLS400							